

Left Edge Topstitch Foot

A Left Edge Topstitch Foot will make any non-professional look very professional. It has a special feature that allows for absolute straight stitching along a raised or slightly raised edge.

Snap on the Left Edge Topstitch foot to apply edgestitching and/or topstitching on; bindings, pockets, garments, and home dec items.

The underside of the foot features a higher edge on the right side so thicker edges (bindings, collars, pockets, etc) are positioned to the right as you sew. Great when using the sewing machines free arm. A red line on the top marks the edge of the groove to further assist you.



Fine tune how far from the edge you want your line of stitches by adjusting your needle position to stitch beautifully and perfectly straight anywhere between on the edge to approx. 1/4 inch from the edge.

How to Use:

1. Thread machine with top and bobbin thread.
2. Snap on the Left Edge Topstitch Foot.
3. Select straight stitch. If topstitching with heavier threads or triple stitch a 3.0 or higher setting is recommended.
4. Position project under the foot with the red guide mark at the exact edge of binding, pocket, cuff, etc.
5. Adjust needle position from the edge of your item you want the topstitching.
6. Stitch. The Left Edge Topstitch Foot will guide the edge of the fabric.

Great uses for the Left Edge Topstitch Foot:

Attaching Bindings by Machine: Stitch binding on from the backside of project, fold over the edge and topstitch in place along the fold.

Topstitch along Cuffs, Collars, Front Facings, yokes: Gives a decorative edge while at the same time keeping garment edges from rolling.

Edge Stitch Pockets and Hemming curtains, Pants, etc: Pretty, functional, and a totally professional look.

That's just a few ideas. What can you think of?